




URUCHOMIENIE SYSTEMU PREZENTACJI

Naciśnięcie dowolnego z 4 zaznaczonych przycisków włącza projektor, rozwija ekran projekcyjny, włącza nagłośnienie jednocześnie z aktywnym źródłem sygnału ustawionym odpowiednio na :



- **przewód HDMI / USB**
(np. Laptop)
w przyłączy sygnałowym katedry
- **KOMPUTER PC**
w katedrze
- **prezentację Beprzewodową**
- AirMedia
- **Monitor Interaktywny**

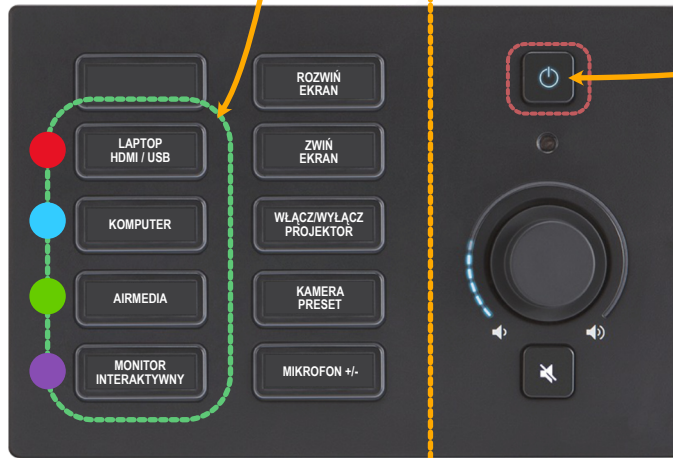

WYŁĄCZENIE SYSTEMU PREZENTACJI

Naciśnięcie zaznaczonego przycisku :
wyłącza projektor, zwiija ekran projekcyjny,
wyłącza nagłośnienie




Uwaga:
WYŁĄCZENIE i ponowne WŁĄCZENIE systemu przywraca wartości domyślne wszystkich ustawień systemu.

PODCZAS PREZENTACJI

Funkcjonalność poszczególnych przycisków:
wybór źródła sygnału do prezentacji:

- **przewód HDMI / USB**
(np. Laptop)
w przyłączy sygnałowym katedry
- **KOMPUTER PC**
w katedrze
- **prezentację Beprzewodową**
- AirMedia
- **Monitor Interaktywny**

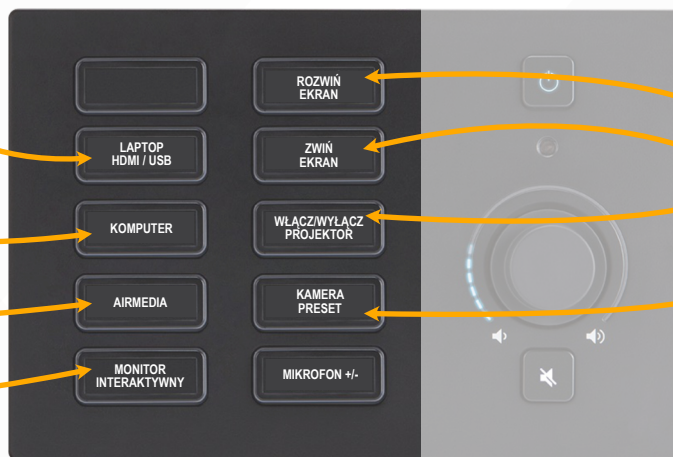

sterowanie urządzeniami:

- **ROZWINIĘCIE ekranu projekcyjnego**
- **ZWINIĘCIE ekranu projekcyjnego**
- **WYŁĄCZENIE lub WŁĄCZENIE Projektora**
- **Wywołanie domyślnego ustawienia KAMERY systemu wideokonferencyjnego**

regulacja dźwięku:



● **REGULACJA POZIOMU GŁOŚNOŚCI DŹWIĘKU CAŁEJ SALI**

Uwaga:
- w momencie kiedy podświetlony jest przycisk MIKROFON +/- pokrętkę ustawia tylko głośność mikrofonu

- jeżeli poziom dźwięku prezentacji z innych źródeł (np z Laptopa, Komputera PC, etc.) jest zbyt cichy to należy w pierwszej kolejności sprawdzić poziom dźwięku ustawiony na tym źródle.

● **WYCISZENIE DŹWIĘKU Z GŁOŚNIKÓW DLA CAŁEJ SALI**
niebieskie podświetlenie przycisku na panelu, oznacza, że dźwięki zostały wyciszone

● **POZIOM GŁOŚNOŚCI MIKROFONU**

w celu regulacji poziomu głośności mikrofonu należy:
(1) wcisnąć przycisk MIKROFON +/- aby się podświetlił a następnie
(2) pokrętkę regulacji głośności po prawej stronie należy ustawić żądaną głośność dla mikrofonu





STARTING THE PRESENTATION SYSTEM

Pressing any of the 4 highlighted buttons: turns on the projector, unfolds the projection screen, turns on the sound system simultaneously with the active signal source set to:

- **HDMI / USB cable** (e.g. Laptop) in the signal connection on the table
- **KOMPUTER PC** w katedrze
- **Wireless presentation** - AirMedia
- **Interactive Monitor**



TURN OFF THE PRESENTATION SYSTEM

Pressing the highlighted button: turns off the projector, rolls up the projection screen, turns off the sound system.




Attention: SWITCH OFF and ON again system restores values default of all system settings.

DURING THE PRESENTATION

Functionality of individual buttons:

signal source selection for presentation:

- **HDMI / USB cable** (e.g. Laptop) in the signal connection on the table
- **KOMPUTER PC** w katedrze
- **Wireless presentation** - AirMedia
- **Interactive Monitor**

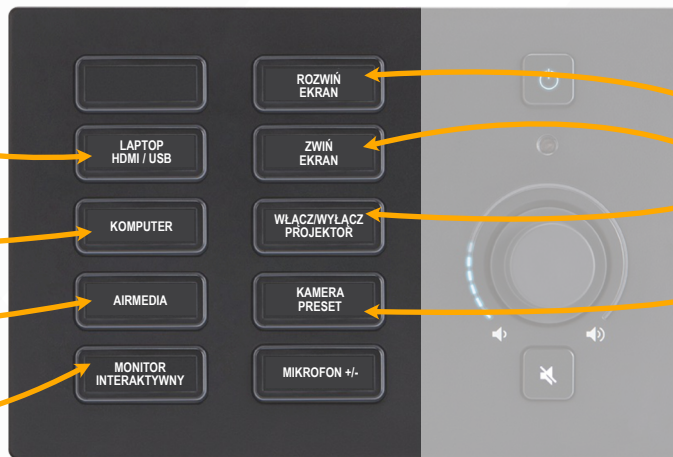

device control:

- **EXPAND** the projection screen
- **COLLAPSE** the projection screen
- **OFF or ON** Projector
- Calling the **default CAMERA** setting of the videoconferencing system

sound adjustment:

ADJUSTING THE SOUND LEVEL IN THE ROOM

note:
- when the button MICROPHONE +/- is highlighted knob only sets the microphone volume

- if the sound level of the presentation from other sources (e.g. from a laptop, PC, etc.) is too quiet this should be done first check the sound level set on this source.

MUTE THE SOUND FROM THE SPEAKERS FOR THE ENTIRE HALL

note: the blue backlighting of the button on the panel indicates that the sound has been muted.

MICROPHONE VOLUME LEVEL

to adjust the microphone volume level:
(1) press the MICROPHONE +/- button so that it lights up, then
(2) the Volume knob on the right set the desired microphone volume.

